




HP Omni 10 Camera Replacement

How to remove and replace the web-camera

Written By: Alex Miller

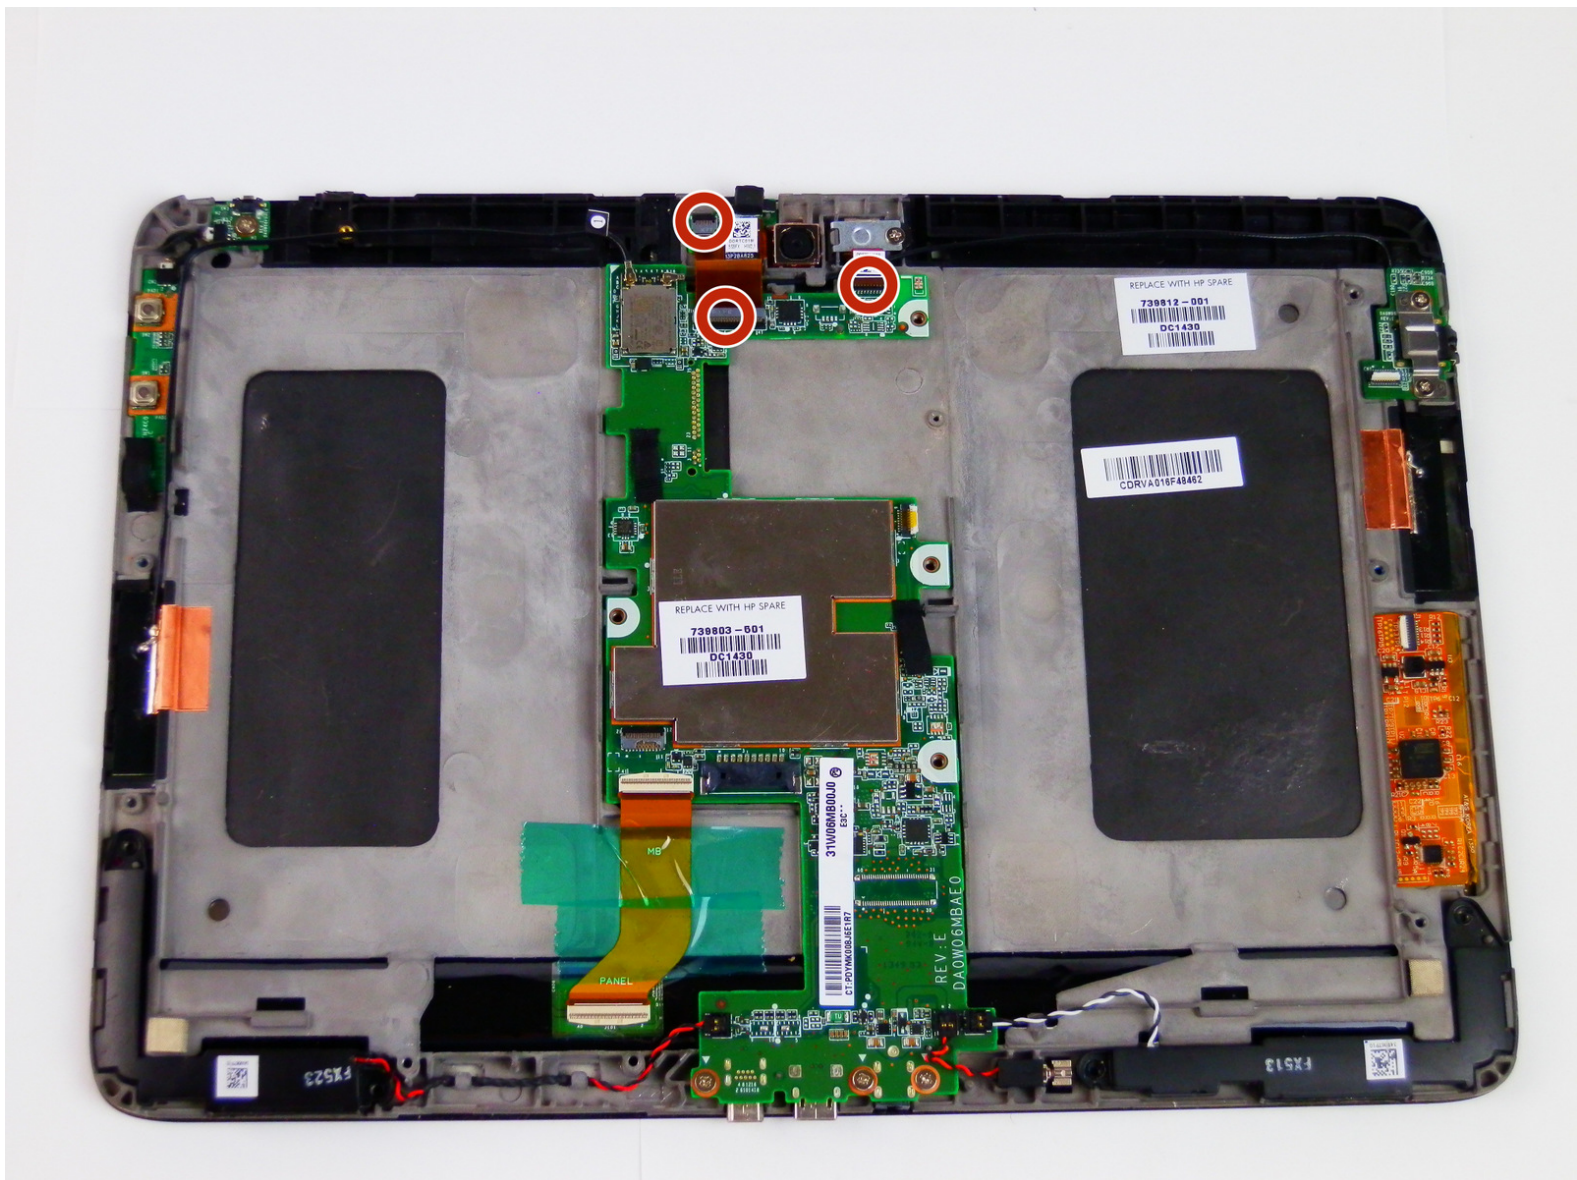

INTRODUCTION


Using a pair of tweezers and a 00 Phillips head screwdriver, this guide will show how to remove a web camera from an HP Omni 10 tablet in roughly 3 to 4 minutes.



TOOLS:


- [Tweezers](#) (1)
-

Step 1 — Camera

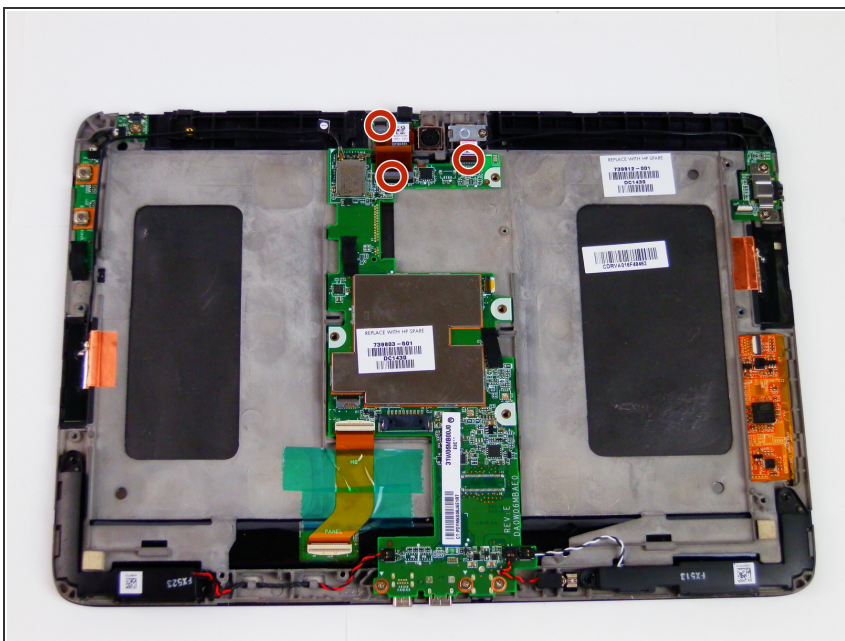



- Pull the black plastic security tabs into an upward position.

Step 2

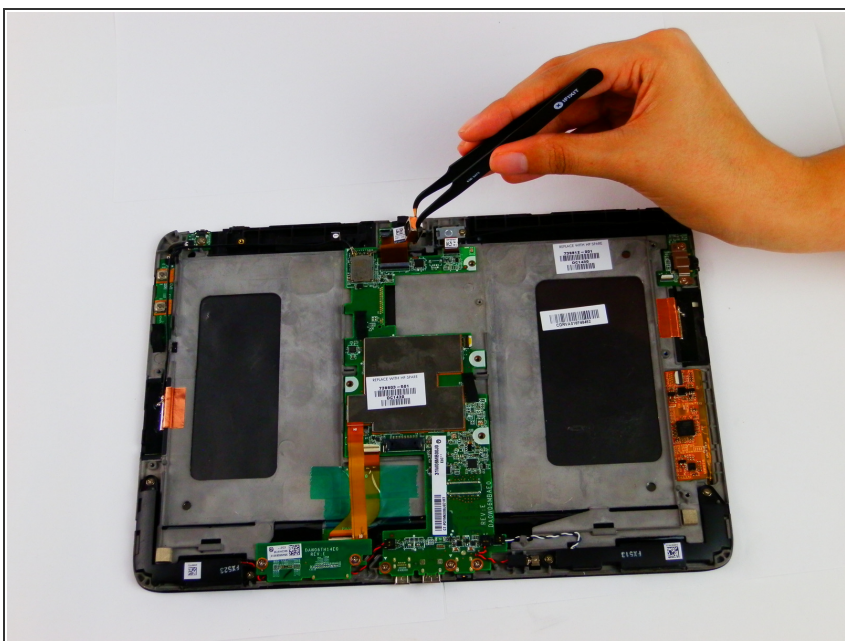

- With a pair of tweezers, grab the camera and pull it out of the socket it is in.

Step 3

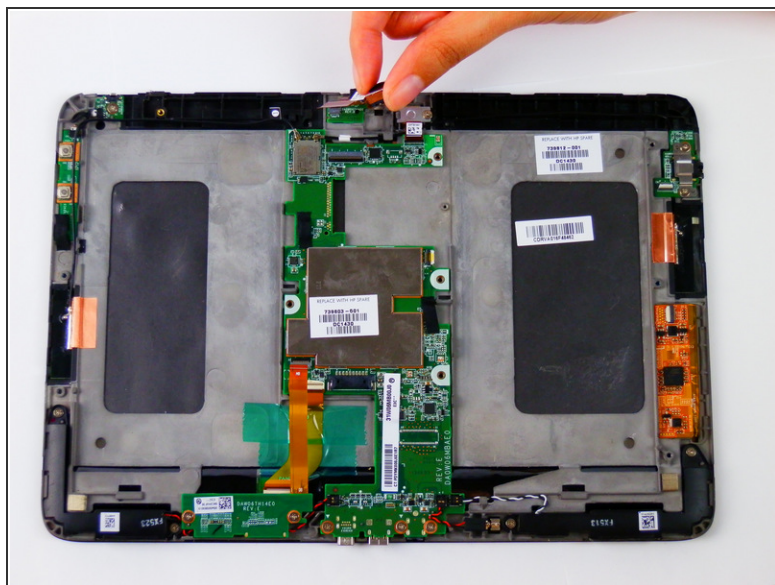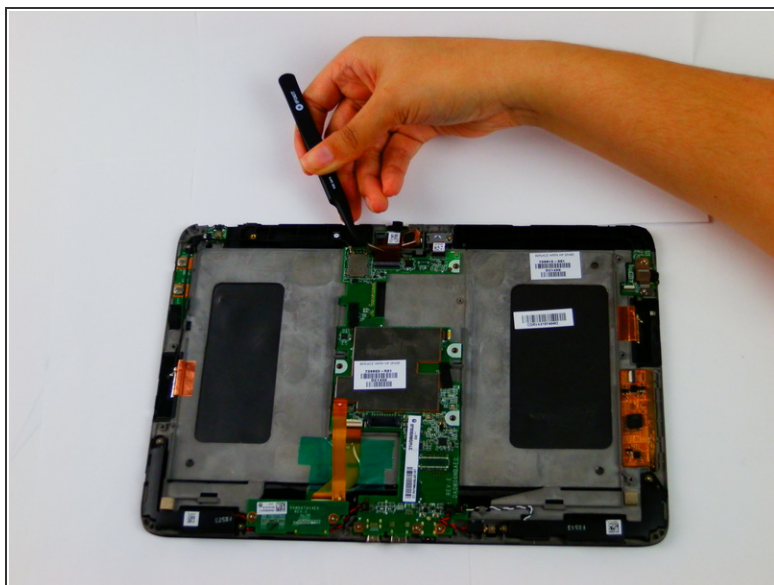

- Pull the film connector out and lift the camera and film out.
- ⓘ The film will be attached to the tablet via adhesive, so it may stick.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 03:29:55 AM.